Neko Unjyatta - *I Gave Birth to a Cat!*

How to Properly Raise a Cat

Please read this instruction manual carefully before playing. Also, please keep this instruction manual safe even after playing.
Bottom Bubble: *"Take care of me, meow!"*
Created and Copyrighted © Takara Co., Ltd. 1997

For ages 6 and up. Do not give this to children under 6 years old.

To our customers:
Thank you very much for purchasing this product. Please read this instruction manual carefully before use.

Customer Service Center (Contact Information):
Takara Customer Service Center

- **Address**: 〒125-8503 東京都葛飾区四つ木1-19-16
- **Phone Number**: 東京【(03) 3602-3030】
- **Osaka Address**: 〒564-0063 大阪府吹田市江坂町1-17-14
- **Phone Number**: 大阪【(06) 339-6673】

MADE IN CHINA
Release Date: November 1997

Caution: *As electronic parts are used, strong shocks or electrical impacts may cause malfunction or failure, so please avoid them. When replacing the batteries, please pay attention to the direction of the batteries.*
During use, the screen may darken, or operation may become difficult. Please replace with new batteries.

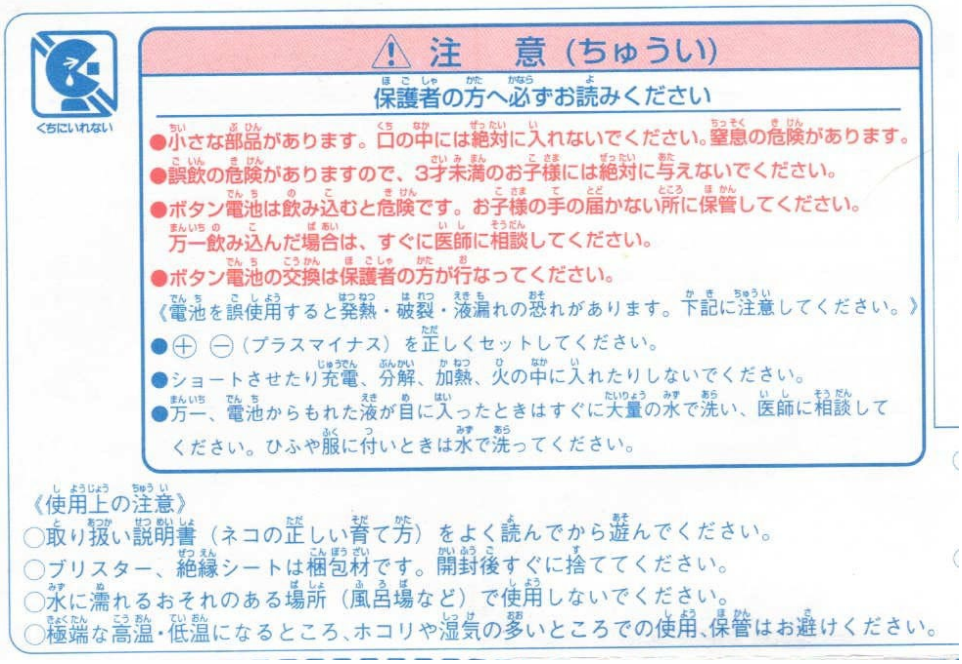

⚠ Caution

To guardians: Please read this carefully.

Warnings (in Red):

- There are small parts. Do not put them in your mouth. There is a risk of choking.
- There is a risk of accidental ingestion, so do not give this to children under 3 years old.
- Button batteries are dangerous if swallowed. Store them out of children's reach.
- If swallowed, consult a doctor immediately.
- Battery replacement should be performed by a guardian.

Middle Section (Battery Handling)

Improper use of batteries may cause overheating, explosion, or leakage. Please pay attention to the following points.

- Set the batteries in the correct + and - orientation.
- Do not short-circuit, charge, disassemble, heat, or throw them into fire.
- If battery liquid enters your eyes, immediately rinse with plenty of water and consult a doctor. If it gets on your skin or clothing, wash with water.

Bottom Section (Usage Notes)

Precautions for Use

- Read the instruction manual (How to Properly Raise a Cat) carefully before playing.
- The blister and insulation sheet are packaging materials. Dispose of them immediately after opening.
- Do not use it in places where it may get wet (e.g., bathrooms or sinks).
- Avoid using or storing the product in extremely high or low temperatures, as this may cause deformation.

Left Page: Before Raising a Kitten

- **Parts of the Device**:
  - 本体 → Main Unit
  - ◀▶ボタン (選択) → Left/Right Buttons (Selection)
  - Aボタン (キャンセル)" → A Button (Cancel)
  - Bボタン (決定)" → B Button (Confirm)
  - リセットボタン → Reset Button (Press lightly with a thin stick or pencil)
  - 絶縁シート → Insulation Sheet
  - 音のON/OFFスイッチ → Sound ON/OFF Switch

Instructions: Remove the insulation sheet and press the reset switch. This will enter the time-setting mode, so set the current time.

- If no button is pressed within about 15 seconds after pressing reset, the screen will enter screen saver mode with a picture of a baby cat. However, if you haven't set the time properly, pressing any button will return you to the time-setting mode.

Right Page: How to Replace the Battery

Warning: Battery replacement must be done by a guardian.

- If the screen becomes dim, replace the battery.
- Use a screwdriver to remove the screw on the back cover of the main unit. Battery compartment slides out like a drawer.
- Replace the old battery with a new lithium battery (CR2032), ensuring the correct + and - orientation.
- Close the cover and tighten the screw.

Secret Tip: *If you replace the battery quickly, the data won't be erased, and you can continue playing. However, the time limit is about 1 minute.*

Sound ON/OFF

You can toggle the sound on and off using the switch on the back of the main unit.

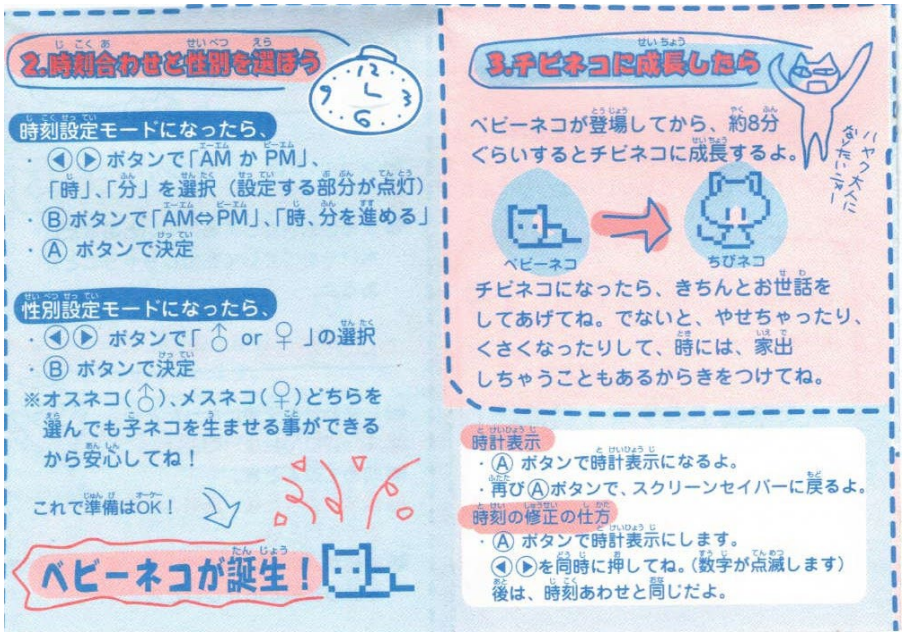

Left Page: Set the Time and Choose the Gender

When in Time Setting Mode:

1. Use the ◀▶ buttons to select 'AM or PM', 'Hour', and 'Minute' (the section to set will light up).
2. Press the B button to switch between 'AM⇔PM' and advance 'Hour' or 'Minute'.
3. Press the A button to confirm.

When in Gender Setting Mode:

1. Use the ◀▶ buttons to choose ♂ (male) or ♀ (female).
2. Press the B button to confirm."

Whether you choose a male cat (♂) or female cat (♀), you can still raise kittens, so don’t worry

Now you’re all set! **A Baby Cat is Born!**

Right Page: When the Baby Cat Grows Up

About 8 minutes after the baby cat appears, it will grow into a small cat.

- ベビーネコ → Baby Cat
- 子ビネコ → Small Cat

Once it becomes a small cat, take good care of it. If you don’t, it may lose weight, become 'smelly', or even sometimes run away from home, so be careful!

Clock Display and Adjustment Instructions

- Press the A button to display the clock.
- Press the A button again to return to the screensaver.
- To adjust the clock:
  - Press the A button to display the clock.
  - Press ◀▶ simultaneously (the numbers will flash).
  - After that, adjust the time as described above.

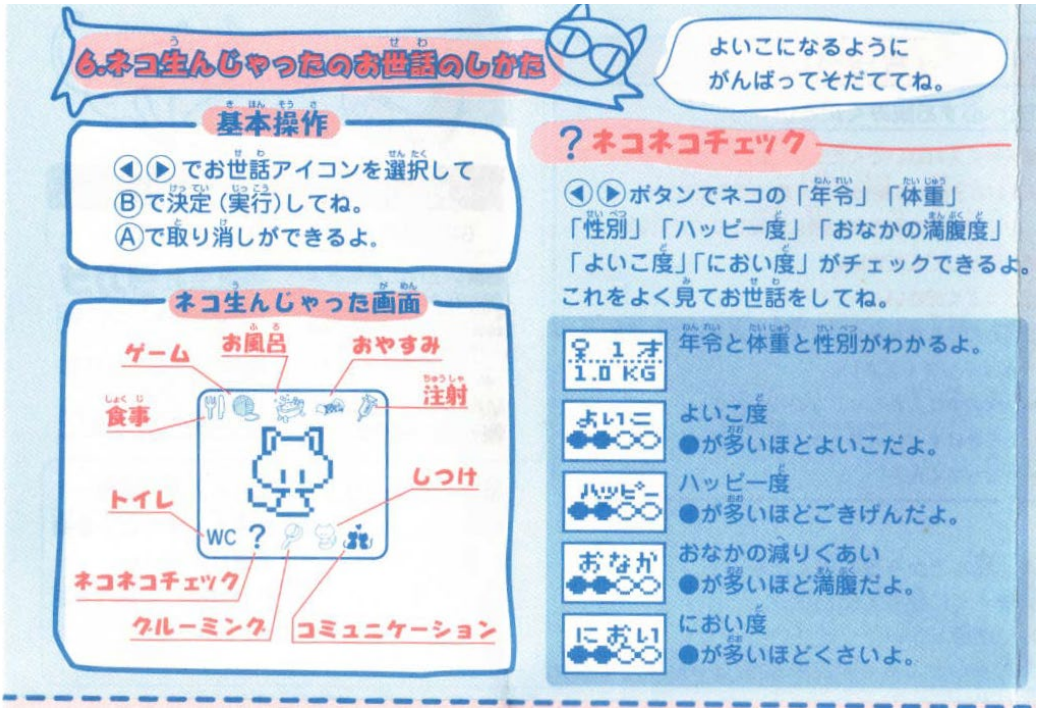

6. How to Take Care of Your Neko Unjyatta

Raise your cat well so it becomes a good kitty!

Basic Operations

- Use the ◀▶ buttons to select a care icon.
- Press the B button to confirm (execute).
- Press the A button to cancel.

Neko Unjyatta Main Screen

Top Row Icons:

- Food – Knife and Fork Icon
- Game – Ball of Yarn Icon
- Bath – Bathtub Icon
- Sleep – Bed Icon
- Injection – Syringe Icon

Bottom Row Icons:

- Toilet – WC Icon
- Cat Check – Question Mark Icon
- Grooming – Brush Icon
- Discipline – Single Cat Icon
- Communication – Two cats with heart Icon

? Cat Check Icon

Use the ◀▶ buttons to check the cat's 'Age', 'Weight', 'Gender', 'Happiness Level', 'Fullness Level', 'Goodness Level', and 'Smell Level'. Pay attention to these and take care of your cat accordingly.

Screen 1: You can check the cat's age, weight, and gender.

Screen 2: **よいこ** → Goodness Level

- The more dots, the better behaved your cat is.

Screen 3: **ハッピー**→ Happiness Level

- The more dots, the happier your cat is.

Screen 4: **おなか** → Fullness Level

- The more dots, the fuller your cat is.

Screen 5: **におい** → Smell Level

- The more dots, the smellier your cat is.

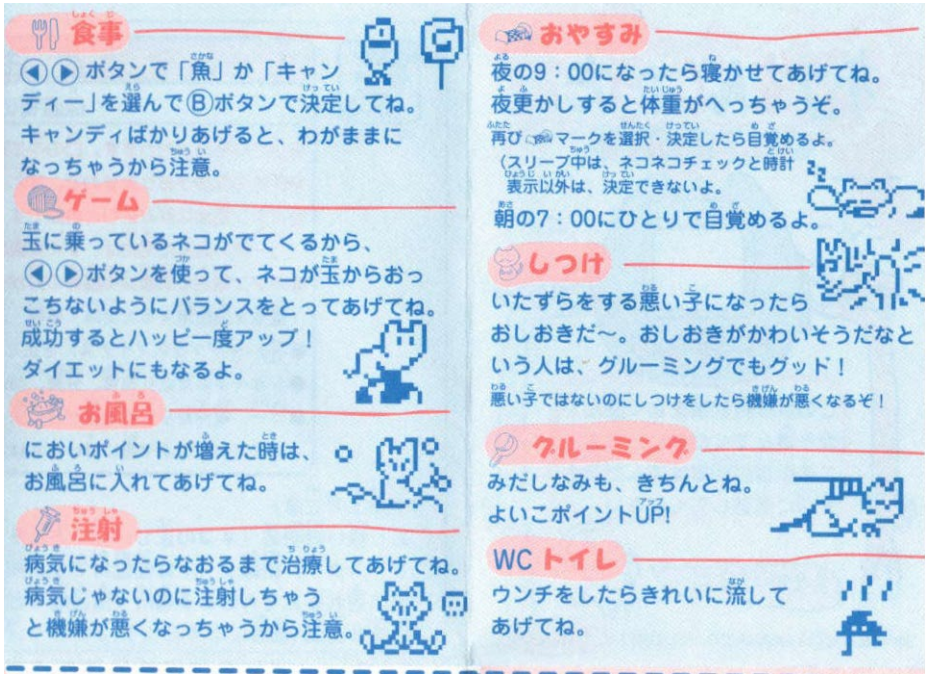

Food
Use the ◀▶ buttons to select 'Fish' or 'Candy' and press the B button to confirm. Be careful—if you give too much candy, your cat may become spoiled!

Game
The cat will appear on a ball. Use the ◀▶ buttons to balance the cat so it doesn't fall off. If successful, the Happiness Level will increase! It also works as exercise.

Bath
If the Smell Points increase, give your cat a bath.

Injection
If your cat becomes sick, treat it with an injection until it gets better. Be careful—if you give an injection when the cat isn't sick, it will become upset!

Sleep
Put your cat to bed at 9:00 PM. Staying up late will cause weight loss.
Select the sleep icon and confirm to activate sleep mode (screen saver). During this time, only the Cat Check and clock display can be accessed.
The cat will wake up on its own at 7:00 AM.

Discipline
If your cat starts misbehaving, discipline it! If you feel sorry for disciplining, grooming can help too.
Be careful—if you discipline a good cat, it will become upset!

Grooming
Keep your cat well-groomed and neat. This will increase its Goodness Level!

Toilet
If your cat poops, make sure to flush and clean it up.

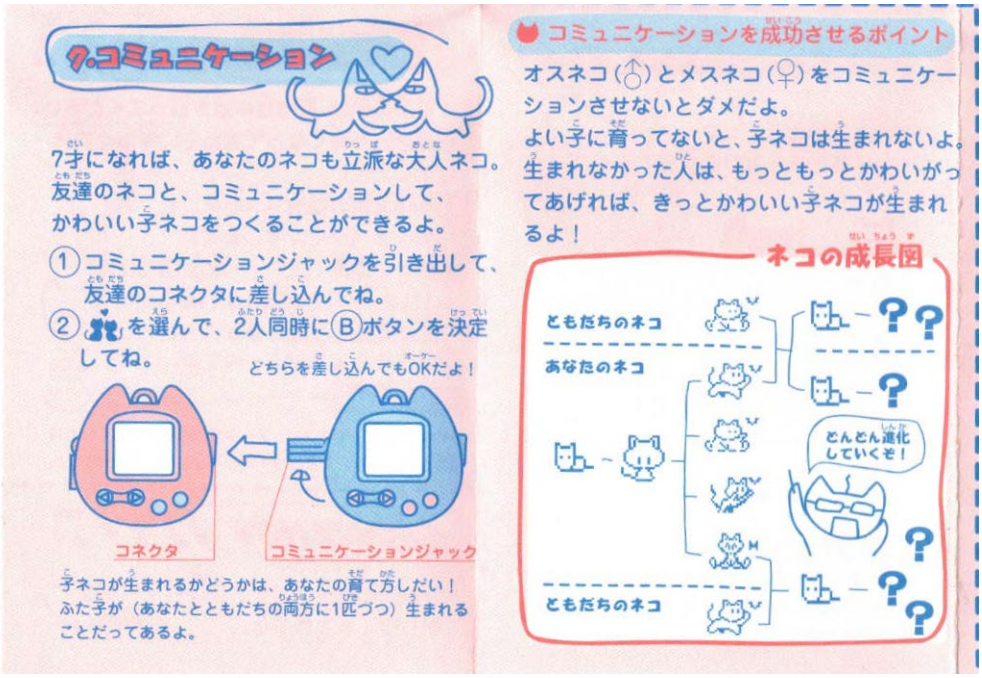

7. Communication

If your cat reaches age 7, it will become a splendid adult cat. You can connect with your friend's cat and create cute kittens!

How to Communicate:

1. Pull out the communication jack and connect it to your friend’s connector.
2. Select 'two players' and press the B button at the same time to confirm.

Note: It’s okay no matter which side you plug in!

Whether or not kittens are born depends on how well you raise your cat! If twins are born, both cats will receive one kitten each.

Communication Success Tips

You must connect a male cat (♂) and a female cat (♀) for communication.
If the cat hasn’t been raised well, kittens won’t be born.
If no kittens are born, keep taking good care of your cat, and eventually, cute kittens will be born!

Cat Growth Chart

- ともだちのネコ → Friend's Cat
- あなたのネコ → Your Cat
- どんどん進化していくぞ！ → They will keep evolving!

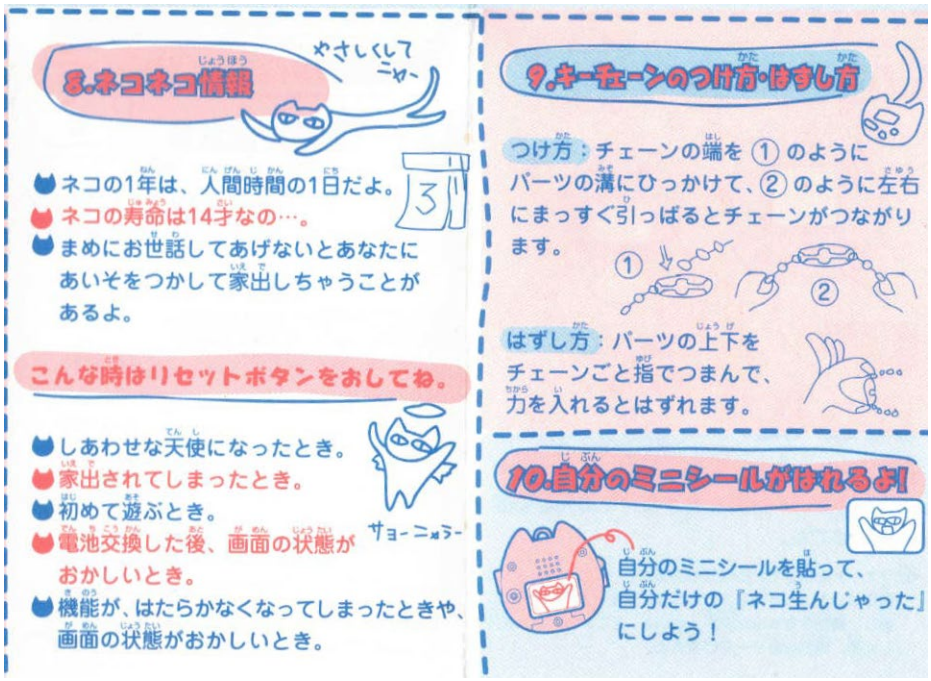

8. Neko Neko Information

- 1 year for your cat equals 1 day in human time.
- The cat's lifespan is 14 years...
- If you don't take care of it regularly, it may get fed up with you and run away from home.

In These Situations, Press the Reset Button.

1. When your cat becomes a happy angel.
2. When your cat runs away.
3. When playing for the first time.
4. After replacing the battery, if the screen acts strangely.
5. If the functions stop working or the screen behaves abnormally.

---

9. How to Attach and Detach the Keychain

How to Attach

Hook the end of the chain into the part's groove as shown in step ①. Then pull straight to the left and right as shown in step ② to connect the chain.

How to Detach

Pinch the part from above and below along with the chain, and apply force to remove it.

---

10. You Can Add Your Own Mini Stickers!

Stick on your own mini-stickers to create your very own Neko Unjyatta